

 


KIO320P-SLIM USER MANUAL

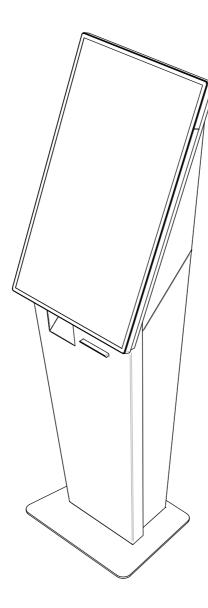


KIO320P-SLIM SPECIFICATIONS

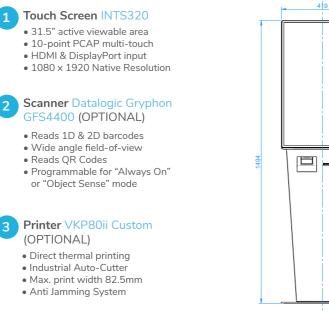



CABLING INFORMATION

 Step 1. Connect your desired display cable. (HDMI recommended) (Display port cable may not be included)






Step 2. Connect all USB devices.

Touch Screen Fan **Optional Devices**

Step 3. Connect your PC power cable to the internal powerboard.

KIO320P-SLIM INTERNAL ACCESS

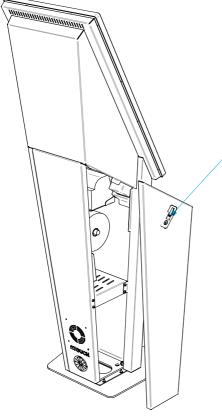

To access the inside of the kiosk, press the release button on the latch making sure the mechanism has been unlocked. Remove the door as shown in the image.

To re-attach the door simply engage the tab at the base of the door, rotate into position and re-engage the latch.


OPTIONAL ACCESSORIES*

*Not shown in illustrations

- Printer
- 2D Scanner (Barcode & QR code)
- EFTPOS Support & Integration
- RFID / Mag. Card Reader
- Built-in speaker

Talk to us about your device needs. (support@intouchscreens.com.au)

SECURING YOUR KIOSK TO THE FLOOR (OPTIONAL)

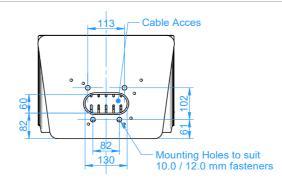

For further information on securing your kiosk, do not hesitate to contact us on support@intouchscreens.com.au

CLEANING INSTRUCTIONS

Applicable to touch screens and kiosks:

InTouch suggests using an isopropyl alcohol spray and clean microfibre cloth.

Caution: Be careful when cleaning your kiosk to avoid vinyled graphic areas so as not to damage the artwork. **DO NOT** use abrasive cleaners, solvents or cloths.

For more information please visit www.intouchscreens.com.au/cleaning

WARRANTY

For more information please visit www.intouchscreens.com.au/warranty

FOR MORE INFORMATION

Telephone 02 9939 6251 support@intouchscreens.com.au sales@intouchscreens.com.au www.intouchscreens.com.au

Visit our Website



